



REVÊTEMENT - DISTINCTION ET MODERNO

IMPORTANT

A PRENDRE EN CONSIDERATION AVANT ET PENDANT L'INSTALLATION DU REVÊTEMENT

1

À l'aide d'un niveau à bulle ou d'un laser, vérifier que la surface de pose est de niveau autant à l'horizontale qu'à la verticale. Si les fourrures sont mal alignées, nous vous suggérons de créer un espace entre le mur et la fourrure à l'aide d'un bardeau (shim) et, s'il y a lieu, un espace entre la fourrure et le revêtement.

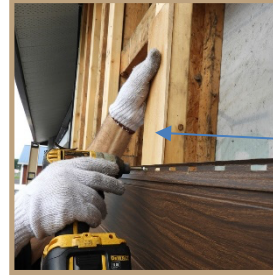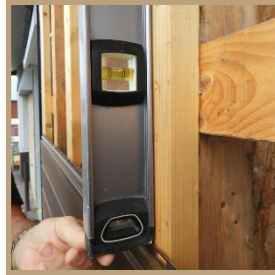


shim


2

Pour ne pas nuire à l'expansion et à la contraction du métal, il est important de fixer les vis au centre des orifices du panneau et de les serrer modérément suivant un angle de 90 degrés.

IMPORTANT - MODERNO La moulure de départ est la même que pour le Distinction, mais installée à l'envers, tel que démontrée sur la photo ci-dessous.

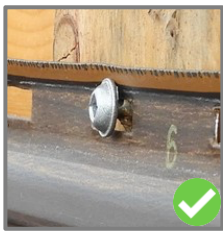

contact modéré

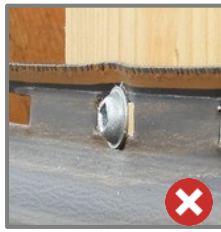

contact exagéré





Bande de départ Distinction



Bande de départ Moderno

3

Pour permettre une dilatation thermique suffisante, il est primordial de laisser un espace de 1/8 po entre chaque panneau et entre les panneaux et les moulures. Pour une belle finition du joint, ajouter une vis supplémentaire sur la planche qui vient d'être installée.

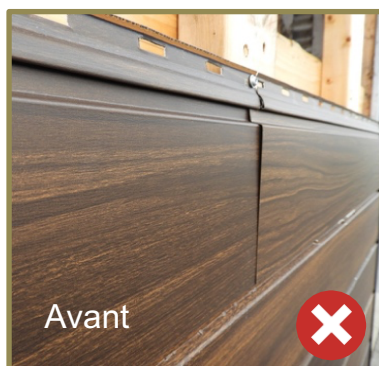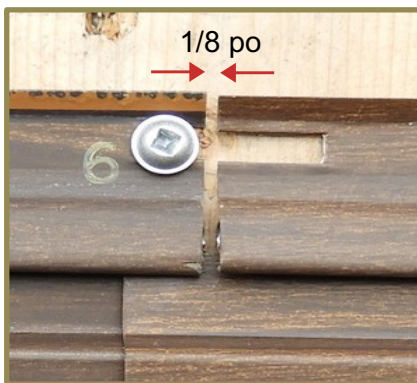

Avant



Après



SIDING - DISTINCTION and MODERNO

IMPORTANT

TO BE TAKEN INTO CONSIDERATION BEFORE AND DURING INSTALLATION.

1

Using a spirit level, verify that the installation area is level (straight) both vertically and horizontally. If the furring is misaligned, we suggest leaving a gap (using shims) between the wall and the furring and, if need be, leaving a gap (using shims again) between the furring and the siding.

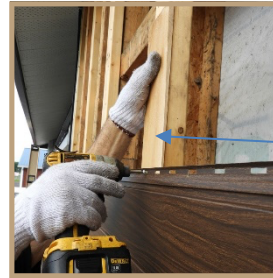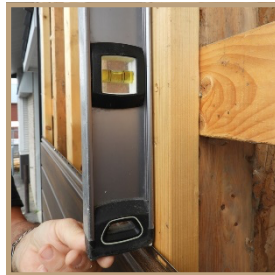


shim


2

To not hinder the expansion and contraction of metal, it is crucial to drive the screws perpendicularly in the center of the panel slots and apply moderate contact.

*** IMPORTANT – for MODERNO *** Unlike the Distinction siding, the starter molding for the Moderno siding must be installed **in reverse** (compared to a Distinction installation) as per the photos below.

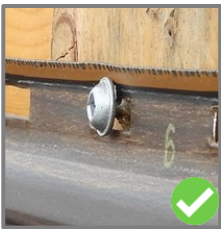

moderate contact

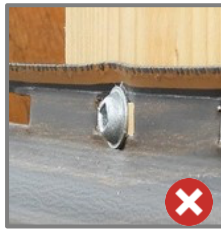

heavy contact





starting strip Distinction



starting strip Moderno

3

It is important to leave a thermal expansion gap of 1/8 inch between panels to ensure sufficient space for expansion. Always add an additional screw to the panel joining 2 pieces to have a proper finish of the joint.

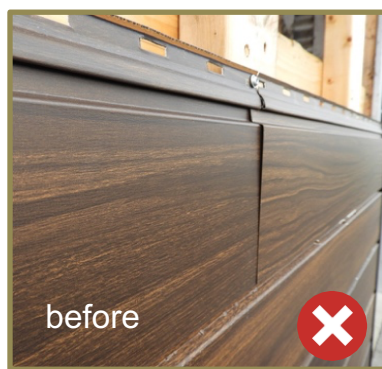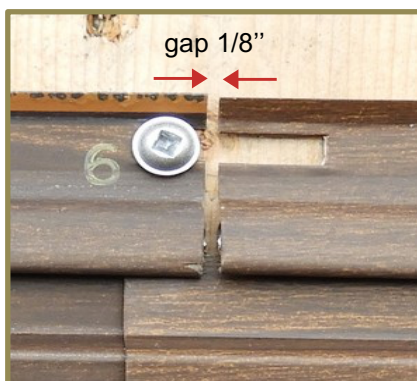

before



after